

Data Sheet


B-QW45-PE07-S



BRIGHTVIEW
TECHNOLOGIES

Batwing Diffuser

BrightView's patent-pending BrightWing™ diffusers provide an efficient “batwing” distribution to help luminaires achieve a flatfield beam profile, uniformly illuminating a floor or work surface without a central hot-spot.

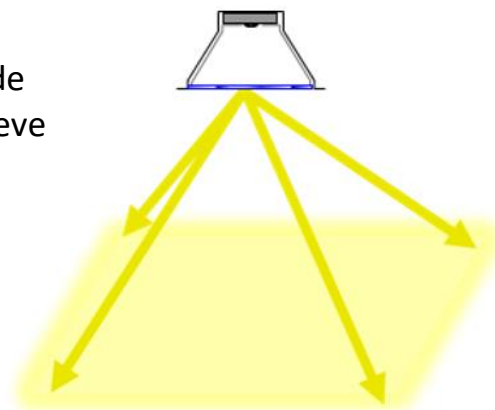

Optical Properties

Spreading Angle: 65.1° ± 5% / 68.0° ± 5%

Efficiency: 95%

Substrate Properties

Substrate Material	PET	<i>Measurement Method</i>
Thickness	0.21 mm / 7 mil	Micrometer
Density	1.4 g/cm ³	ASTM D792
Elongation (MD/TD)	215/140%	ASTM D882
Tensile (MD/TD)	23.5/26 Kpsi	ASTM D882
Min Bend Radius	12.7 mm	ASTM D522
Heat/Shrink (MD/TD)	<1.0/0.5%	ASTM D1204
Backside	Smooth	

Environmental

Condition	Duration/Cycles	ΔTransmission	ΔE*	Measurement Method
-40 °C	1000 Hours	<0.5%	<1	Measurements Following CIE 1931 (D65, 10°) Standard
105 °C	1000 Hours	<0.5%	<2	
Cycle -40 to 85 °	100 Cycles	<0.5%	<1	
65 °C/95% RH	1000 Hours	<0.5%	<1	

Measurement results are the change compared to initial values, and are representative of typical measured results. $E^ = \sqrt{(L^*2 + a^*2 + b^*2)}$*




Data Sheet Version: K
Product Version: M01
Date Retrieved: Monday, December 6, 2021
Database Version: v21.6.14

Data Sheet

B-QW4 - PE07 - S



BRIGHTVIEW
TECHNOLOGIES

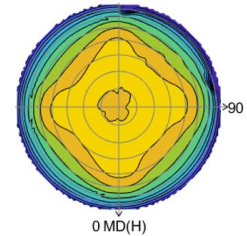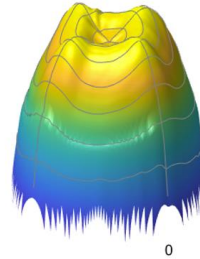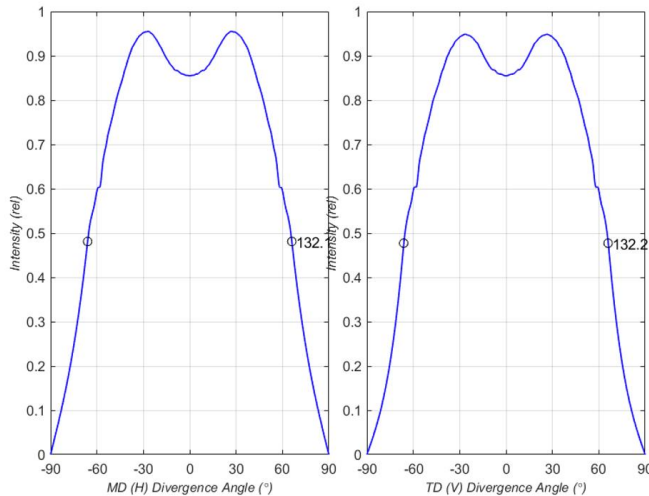

Measured using a Lambertian source

Ratings and Certifications

This product is RoHS and REACH Compliant (certificate available upon request). Product is non-halogenated. The substrate material used in this product has the following properties as provided by the vendor. Yellow cards for these substrates are available. BrightView diffusers have not been tested or rated by UL. The material safety data sheets for substrate materials are available upon request.

- UL-94 rating of substrate material: VTM-2
- UL RTI Elec: 105 Imp: 105 Str: 105

Quality

- If purchasing full sheets, the central 24 in (610 mm) x 48 in (1219 mm) or 72in (1830 mm) is defined as "quality area" which meets all specification, material outside the quality area should not be used.
- Inspected according to BrightView Inspection Method Cosmetic Specifications, document BVT-FGS-001. Document available upon request.

Handling Techniques

- Care should be taken when moving these parts on any surface. The preferred method is to lift the material directly up and off the surface. To avoid scratching the substrate, do not slide the material across any surface.
- Cotton gloves are recommended while handling films to prevent oil stains or fingerprints.
- Care should be taken to prevent spatter or oil spots from machine lubrication.

BrightView goniometric angle test methods:

- (1) 532 nm laser collimated to 0.5° FWHM
- (2) Input source is white light collimated to 3.4° FWHM
- (3) Input source is white light collimated to 5.3° FWHM

Data Sheet Version: K
Product Version: M01
Date Retrieved: Monday, December 6, 2021
Database Version: v21.6.14